

SCAN ME:



V-Maxx Autosport Einbauanleitung Gewindefahrwerk




V-Maxx Autosport installation instructions Coilover-kit

BMW REAR

form nr. 022

Uninstall original rubber spring seat and bumpstop on top and bottom
Serienmäßige Gummi Federauflage und Puffer oben und unten ausbauen

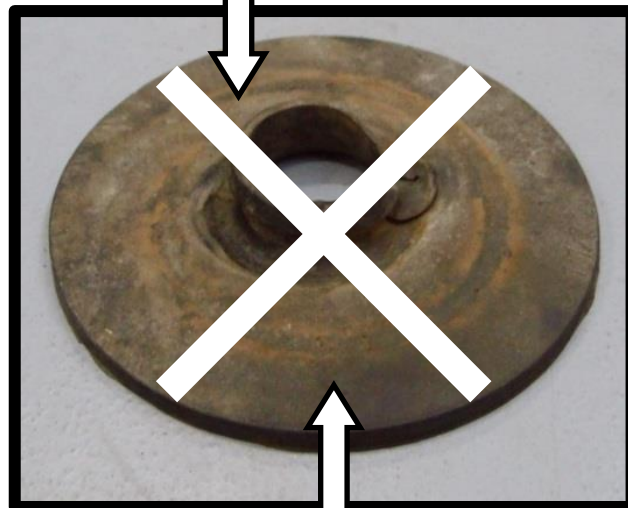

Delete

Nicht Wiederverwenden



Re-use

Wiederverwenden



complete original rear spring seat
with bumpstop attached



Serienmäßige hintere Federauflage
mit Gummipuffer


Copyrights V-MAXX® Autosport B.V., The Netherlands. All rights reserved. Reprints, copying and use of logo's, also partially, only after written permission of V-MAXX® Autosport B.V. No responsibility is taken for printing errors. All rights reserved. All images and pictures of cars in this document/website, serve illustration purposes only and do not imply a (quality) relationship between V-MAXX® Autosport B.V. and the manufacturers of the cars in question. All transactions are subject to our general terms and conditions.



Re-use complete original rear spring seat with bumpstop attached on the bottom of the rear axle



Serienmäßige hintere Federauflage mit Gummipuffer an der Unterseite der Hintere Achse wiederververwenden

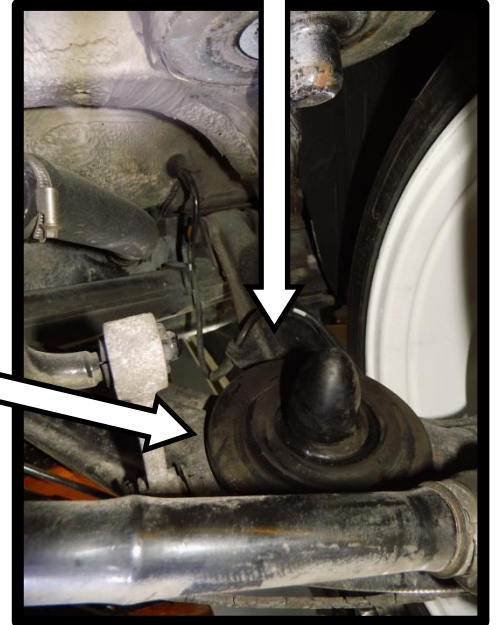

Install V-Maxx 60H BM 012R tube on the upper side of the rear axle



Hintere V-Maxx 60H BM 012R Gewindehülse an der Oberseite der Hinterachse montieren

