





V-Maxx Autosport Einbauanleitung Gewindefahrwerk
V-Maxx Autosport installation instructions Coilover-kit
VW E-UP! / SEAT Mii ELECTRIC / SKODA CITIGO E



Remove original bottom spring seat (ring)
serienmäßige untere Federauflage (Ring) Entfernen

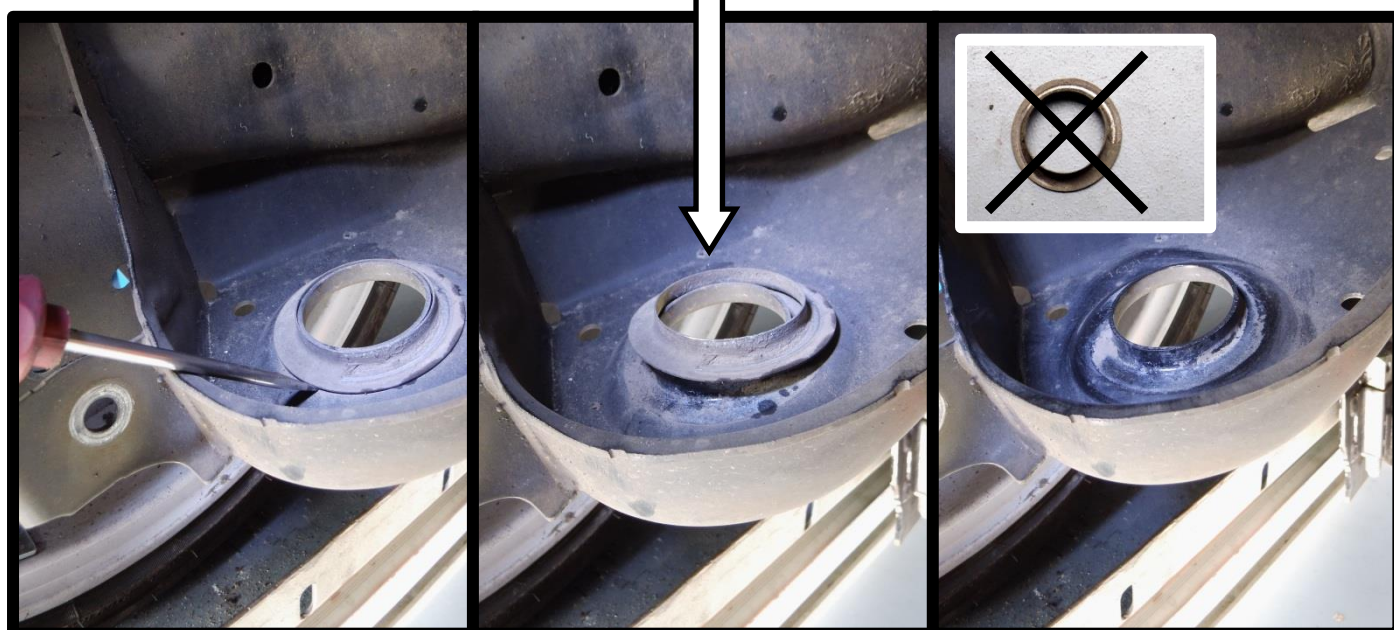

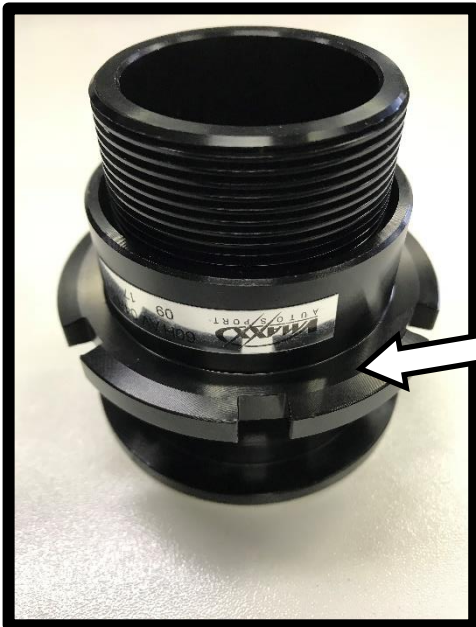

Remove V-MAXX
Autosport bottom
spring seat from tube

V-MAXX Autosport
Federauflage vom
Gewindehülse
Entfernen

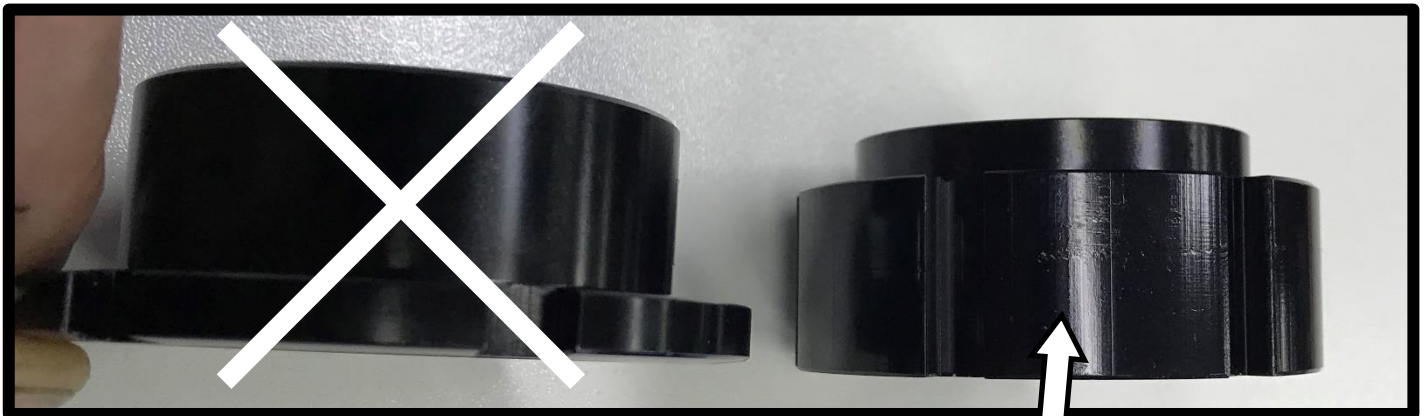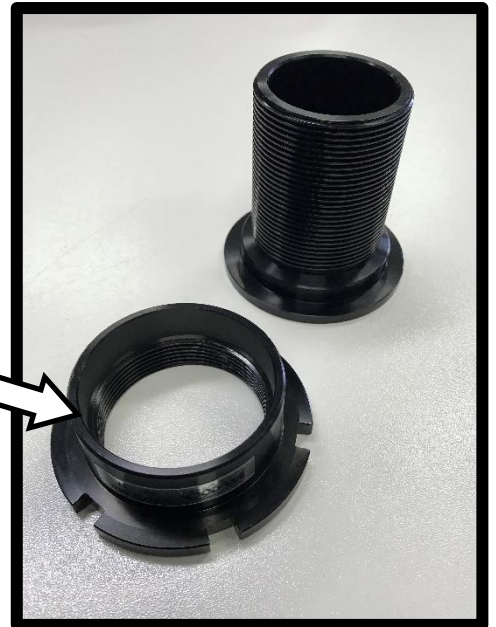


Install extra thick bottom spring seat to the rear tube
Untere extra hohe Federauflage auf Gewindehülse installieren



Install V-MAXX rear adjuster
V-Maxx Hintere Gewindehülse installieren



RE-use original dustcap
serienmäßigen Hinteren Staubschutzmanschetten wiederverwenden

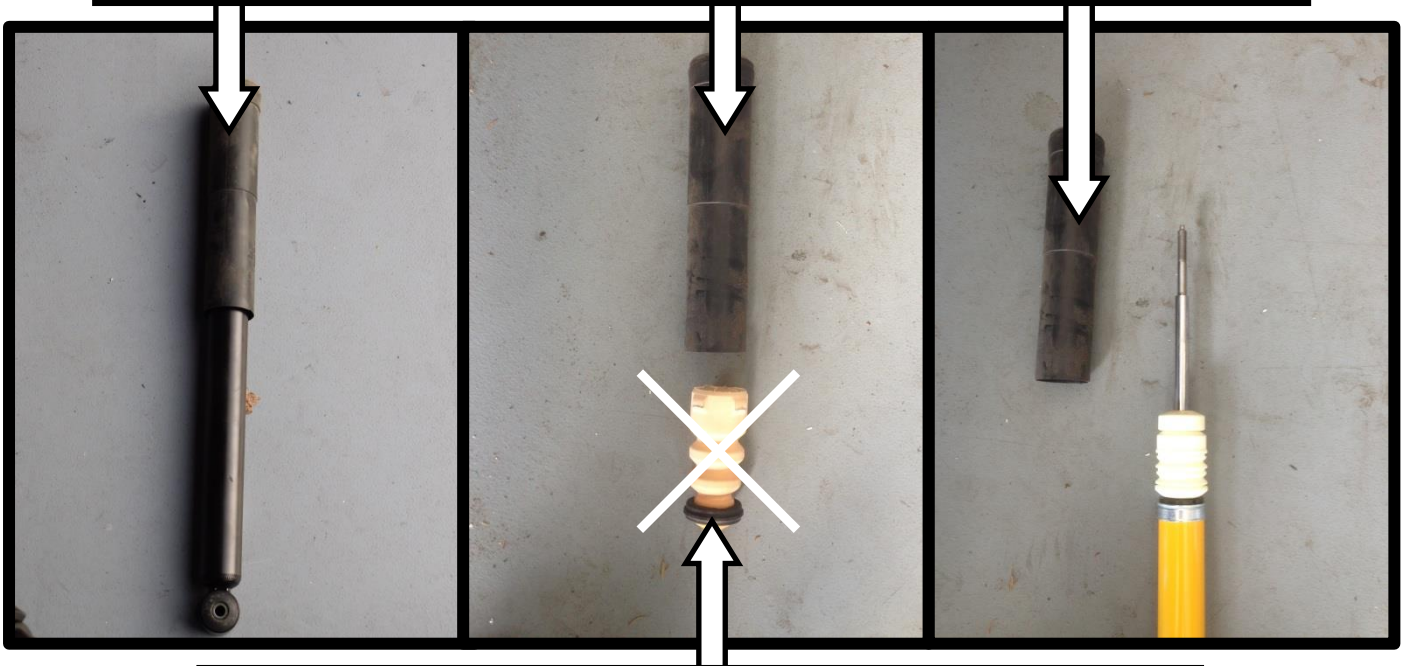

Don't use original bumpstop
Serienmäßigen Hintere Gummipuffer nicht wiederverwenden

Ready for installation!!
Einbaufertig!!



Copyrights V-MAXX® Autosport B.V., The Netherlands. All rights reserved. Reprints, copying and use of logo's, also partially, only after written permission of V-MAXX® Autosport B.V. No responsibility is taken for printing errors. All images and pictures of cars in this document/website, serve illustration purposes only and do not imply a (quality) relationship between V-MAXX® Autosport B.V. and the manufacturers of the cars in question. All transactions are subject to our general terms and conditions.