



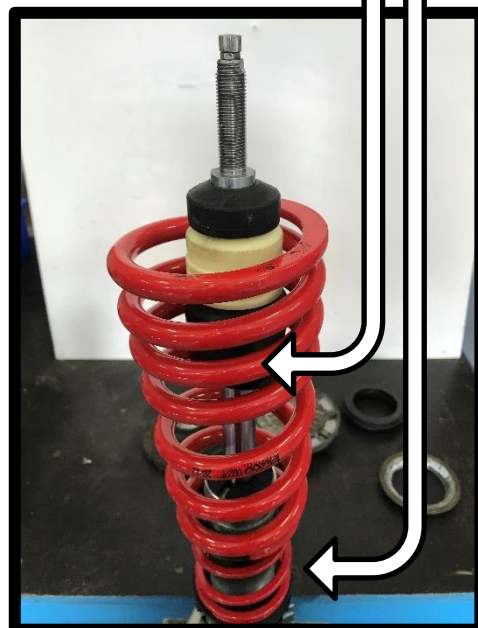

V-Maxx Autosport Einbauanleitung Gewindefahrwerk
V-Maxx Autosport installation instructions Coilover-kit
VOLKSWAGEN T5 / 6


RE-use original top mount parts
Serienmäßige obere Federbeinteile wiederverwenden

Install the helper spring first and main spring after
Die Vorspannfeder als erstes installieren, danach die Hauptfeder

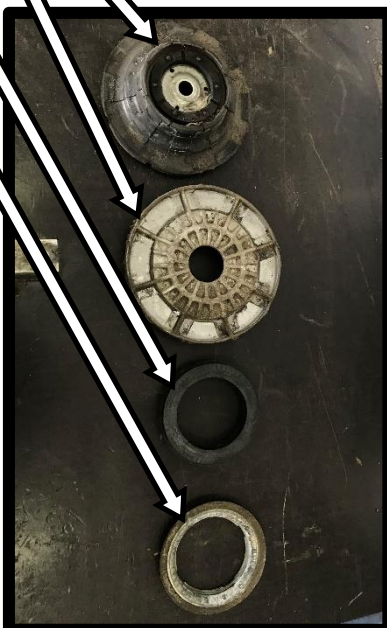

Install the original steel spring seat
Serienmäßigen oberen Stahl Federteller installieren

RE-use and install the original strut bearing to the original steel spring seat
Serienmäßigen oberen Domlager wiederverwenden und auf den Stahl Federteller installieren

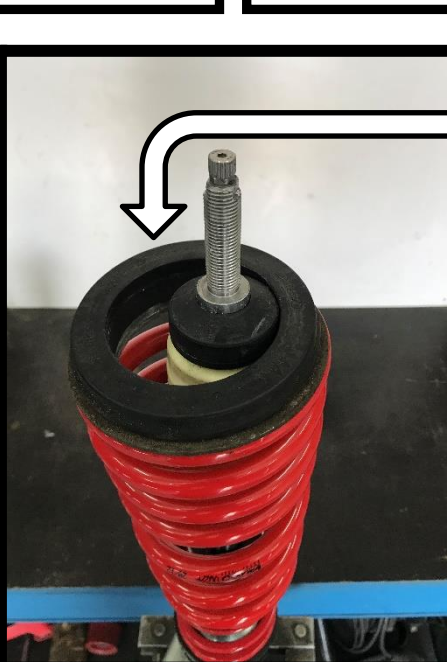

🇬🇧 Install the original aluminium and rubber spring seat to the original strut bearing

🇩🇪 Serienmäßigen Aluminium und Gummi Federteller auf den Serienmäßigen oberen Domlager installieren


🇬🇧 RE-use the original nut

🇩🇪 Serienmäßigen Mutter wiederverwenden



🇬🇧 RE-use and tighten the original nut

🇩🇪 Serienmäßigen Mutter wiederverwenden und festziehen

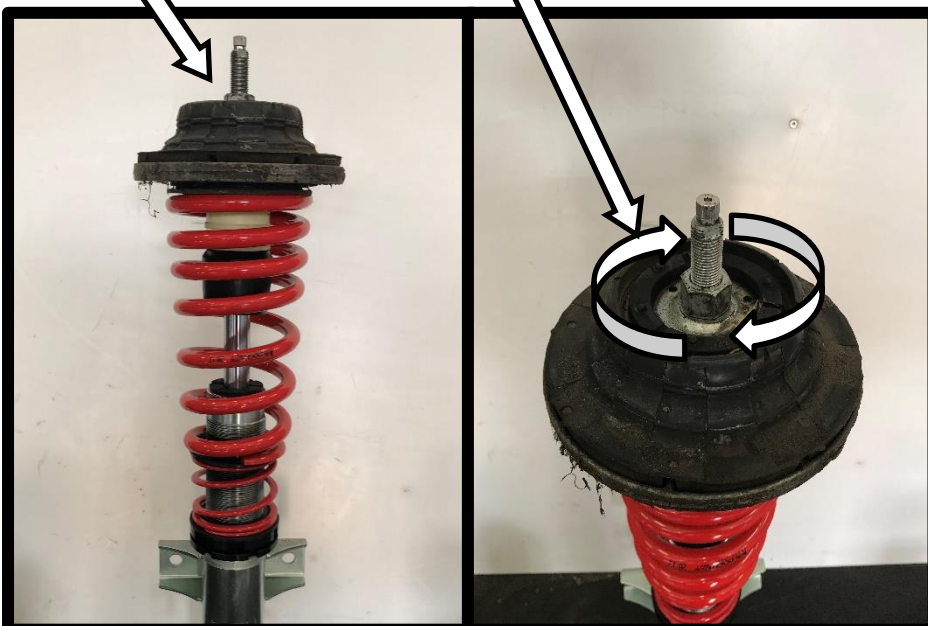

Copyrights V-MAXX® Autosport B.V., The Netherlands. All rights reserved. Reprints, copying and use of logo's, also partially, only after written permission of V-MAXX® Autosport B.V. No responsibility is taken for printing errors. All rights reserved. All images and pictures of cars in this document/website, serve illustration purposes only and do not imply a (quality) relationship between V-MAXX® Autosport B.V. and the manufacturers of the cars in question. All transactions are subject to our general terms and conditions.